












# // USER MANUAL

Description : Full motion monitor arm

Model No : CTS200



 Thanks for buying the product. Please read this manual carefully before you start installing.

## Spec Data





										Desk thickness range	
LCD Size	Weight Capacity	Height Adjust	Tilt	Swivel	Pivot	VESA	Packing Size	Net Weight	Cross Weight	Thru desk	Desk clamp
≤ 34"	2-9	250	-10° ~ +90°	180° / 360°	± 90°	75 × 75	Inner: 685×280×125	Inner:	Inner:	15-50	15-50
						100 × 100	Outer: 700×295×395	Outer:	Outer:		
							Inner/Outer: 3/1	Outer:	Outer:		
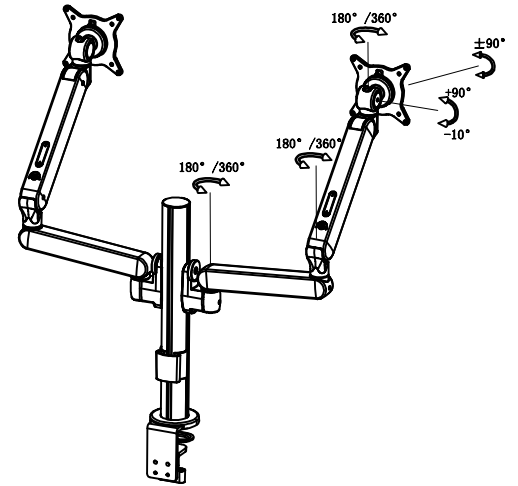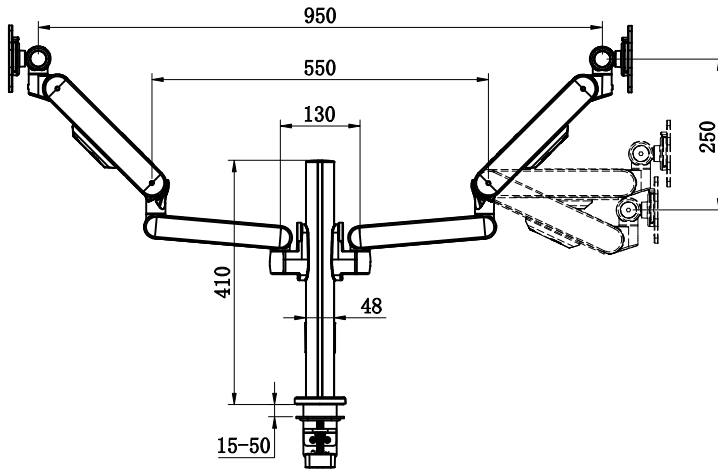
## Product Dimension







Unit : mm



## Parts List


No.	Image	Part No.	Quantity
A			2
B			1
C			2
D			1


## Parts List


No.	Image	Part No.	Quantity
a		M4x16	8
b		6#	1
c		4#	1
d			6
e		M8 × 80	1
f			1

## Base installation


### 1 Desk clamp installation

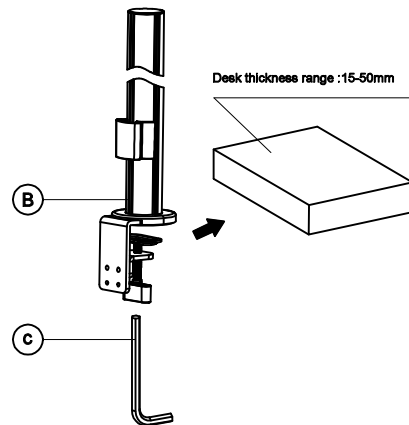


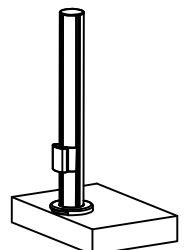
 Please tighten screw and make sure no gap between clamp and desk.  
CAUTION

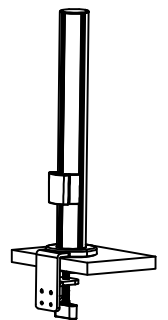

### 2 Thru-desk installation

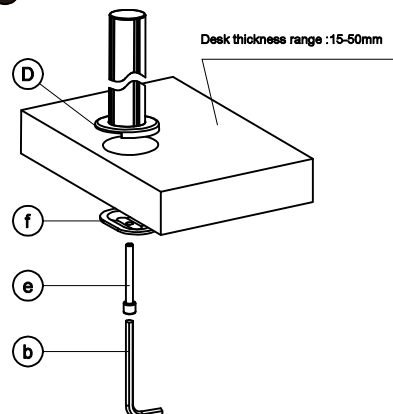


 Please tighten screw and make sure no gap between clamp and desk.  
CAUTION




## Installation Procedure


### 1 VESA plate installation

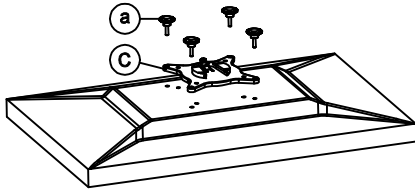


### 2 Static arm installation

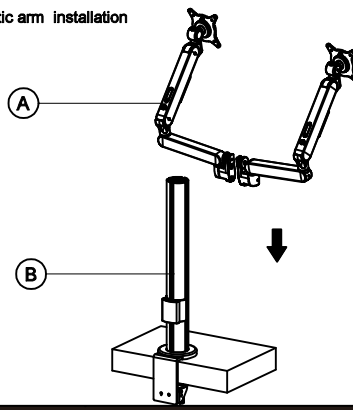







### 3 Insert head assembly into dynamic arm

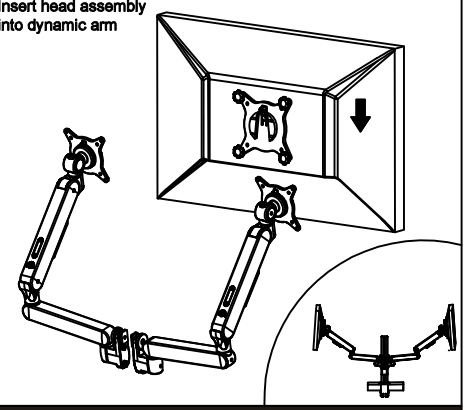

### 4 Cable manager installation

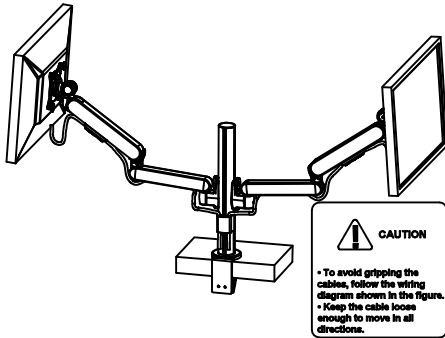


### Rotation limit

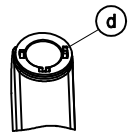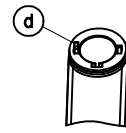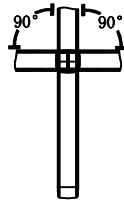


## Adjustment steps


### 1

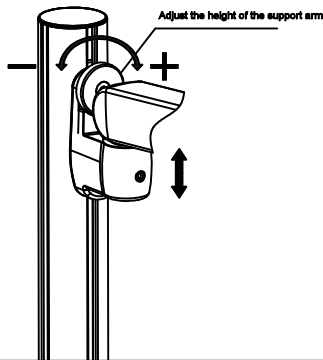

### 2 Pivot /Tilt adjustment

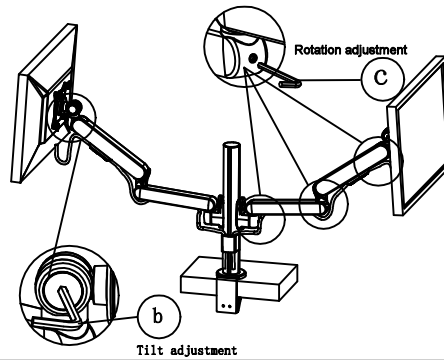

### 3 Height adjustment

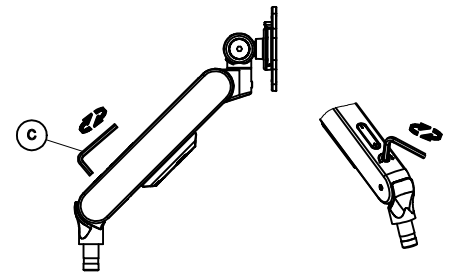

• Try more to make above adjustment based on monitor weight to get best free-stop effect.

- 1.Never overload it. Otherwise,it may cause damage to monitor or human body.
- 2.Please strictly follow the procedures in this manual for installation.Wrong installation may cause damage to product or human body.
- 3.Please use the tools and parts provided by us.Otherwise, it may cause damage to product.
4. Make sure you desk/table is strong enough to support the product and all its parts.
5. This product contains small parts.It will cause personal injury if swallowed.Please put them beyond the places where children can reach.
6. Please install monitor after assembling this product.
7. Please make sure your monitor is fixed properly before you adjust it.
8. Please don't disassemble or exchange the arm of this product arbitrarily.



**WARNING**

